

Radio Shack

TRC-20

MINI DISK

Catalog Numbers 26-1160/26-1161

Operator's Manual

INTRODUCTION

The TRS-80 Mini Disk (see Figure 1) is a small, removable floppy disk. It allows you to store more and much more accurate than other floppy types. The number 1 disk will store just about 80,000 bytes of file space and performance of this will surpass 80,000 bytes of file space. The disk operates with an 800 Kbps data rate which allows you to transfer data at 800,000 bytes per second.

For use with TRS-80 Mini Disk, you need a TRS-80 Level II BASIC. TRS-80 microcomputers use a TRS-80 Level II BASIC. TRS-80 microcomputers which have been modified to Level II BASIC. You will also need the TRS-80 Expansion Interface Unit II (2010) which will allow you to connect the TRS-80 to the TRS-80 Expansion Interface Unit II (2010) which will allow you to connect the TRS-80 to the TRS-80 Expansion Interface Unit II (2010) which will allow you to connect the TRS-80 to the TRS-80 Expansion Interface Unit II (2010).

NOTE:

You require an Expansion Interface Unit II (2010) which will allow you to connect the TRS-80 to the TRS-80 Expansion Interface Unit II (2010) which will allow you to connect the TRS-80 to the TRS-80 Expansion Interface Unit II (2010).

CONNECTION

The ribbon-type expansion cable (see Figure 2) will be used with your Mini Disk (70-110) to connect to your TRS-80 Expansion Interface Unit II (2010) Mini Disk and to a maximum of three other Mini Disk drives (20-110). You have been instructed to connect from the cable's Mini Disk connector such that connector number 1 must be connected to Mini Disk drive number 1, Connector number 2, connector drive number 2, and so on.

The number 1 drive must be used for the system data drive (connection of additional drive types is optional). The number 2, 3, or 4 (if connected) by its position on the cable is indicated.

The TRS-80 Mini Disk's AC connector must be grounded to the 120 VAC, 60Hz supply.



FIGURE 1 Mini Disk



FIGURE 2 Interconnect between the Mini Disk and the TRS-80 Expansion Interface.

POWER APPLICATION

The power switch for the Mini Disk is a two-position toggle switch located on the rear of the unit. Power is ON when the lever is in the "up" position.

PARALLEL OPERATION

Mini Disk drive number 1 must be Radio Shack Catalog Number 26-1160 which includes a cable and a set of termination resistors required for proper operation. Additional Disk drives (Catalog Number 26-1151) do not have the cable nor the termination resistors. The additional drives differ from drive number 1 only in the lack of the termination resistors.

NOTE

The Diskette must be inserted as shown in Figure 3.

During operation, the motors of all of the drives will turn on and off simultaneously. Only one drive may be written to or read from at any given time. A read or write operation is indicated by a head loading "click" and illumination of the LED of the selected drive.

Before any read or write operation, the motors will have been turning for at least one second to ensure the Diskette is rotating at the proper speed.



FIGURE 3 Inserting the Diskette.

CARE OF DISKETTES

Handle, insert and store Diskettes very carefully. Creases, bends, scratches, dust and oil contamination will cause data errors and may damage the drive. Experience has proven that users tend to get lax in handling Diskettes when they begin to use the system on a routine basis. To prevent non-sequant data problems, avoid developing a lax attitude.

Diskettes may be protected from the possibility of undesired recording of data (you may want to use some of your data for read only) by application of a gummed tab over the "write protect notch" as shown in Figure 3. An uncovered write protect notch will allow writing to the Diskette.

DISKETTE TRACKS (see Figure 4).

Information is written to and read from sectors on the Diskette. There are 35 tracks which are concentric circles of data and location information. Each track is divided into ten equal sectors. Each sector contains 256 bytes of information. Track 00 (zero) is the outermost circle and track 34 is the innermost circle.

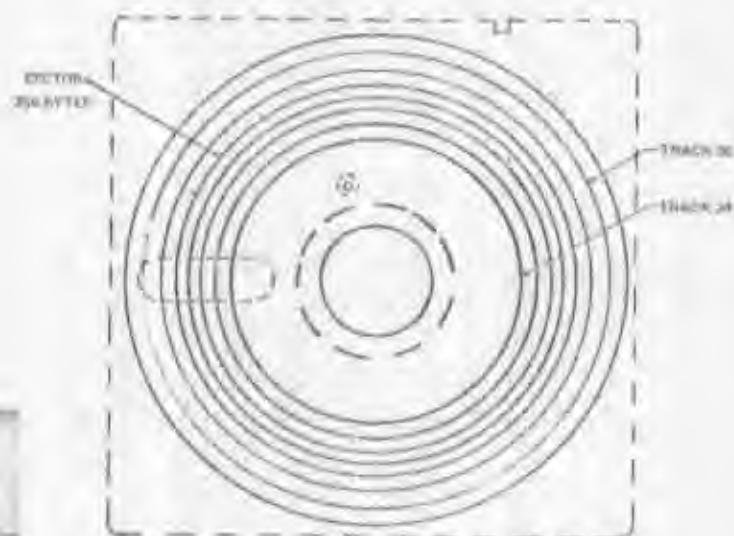


FIGURE 4 Diskette Tracks.

PROGRAMMING INFORMATION

Information pertaining to programming Disk BASIC is contained in the Mini Disk System User's Manual. The Disk, of course, must be used under the control of system programming described in that publication - Disk operation being quite complex. The tapes, etc., provided with the Mini Disk to generate Disk BASIC, are described therein.

MAINTENANCE

No preventive maintenance is necessary but, be careful with the interconnect cable and connectors since most malfunctions are due to connector problems.

SERVICE

For service or repair, you must return your Mini Disk to your local Radio Shack store.

LIMITED WARRANTY

Radio Shack warrants for a period of 90 days from the date of delivery to customer that the computer hardware described herein shall be free from defects in material and workmanship under normal use and service. This warranty shall be void if the unit's case or cabinet is opened or if the unit is altered or modified. During this period, if a defect should occur, the product must be returned to a Radio Shack store or dealer for repair. Customer's sole and exclusive remedy in the event of defect is expressly limited to the correction of the defect by adjustment, repair or replacement at Radio Shack's election and sole expense, except there shall be no obligation to replace or repair items which by their nature are expendable. No representation or other affirmation of fact, including but not limited to statements regarding capacity, reliability for use, or performance of the equipment, shall be or be deemed to be a warranty or representation by Radio Shack, for any purpose, nor give rise to any liability or obligation of Radio Shack whatsoever.

EXCEPT AS SPECIFICALLY PROVIDED IN THIS AGREEMENT, THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND IN NO EVENT SHALL RADIO SHACK BE LIABLE FOR LOSS OF PROFITS OR BENEFITS, INDIRECT, SPECIAL, CONSEQUENTIAL OR OTHER SIMILAR DAMAGES ARISING OUT OF ANY BREACH OF THIS WARRANTY OR OTHERWISE.

RADIO SHACK  A DIVISION OF TANDY CORPORATION

U.S.A.: FORT WORTH, TEXAS 76102
CANADA: BARRIE, ONTARIO L4M 4W5

TANDY CORPORATION

RUSSIA

282 ZHUKOVSKAYA ROAD
MOSCOW 125 012 174

INDIA

4000 INDUSTRIAL ESTATE
6440 BANGALORE

S. A.

65120N ROAD VECOMLSHUP
WEST BRIDGEWAY WEST 105